



Operation Instructions

Apresys®

APRESYS INC.
ADD:2876 N. Berkeley Lake Rd. NW,
Suite 8, Duluth, GA 30096 USA
TEL:1-(666)-368-8287; 1-(678)-957-1187
FAX:1-(678)-957-1159
E-mail: sales@apresys.com

Apresys®

Technical Parameters:

- Temperature Range -40°F ~185°F, -40°C ~85°C
- Precision ±0.8°F (±0.5°C)
- Resolution 0.01°F/ 0.01°C
- Battery Lithium Manganese Battery
- Retention Period 3 Years
- External Dimension 3.3" x 2.7" x 0.12"(8.5cm * 6.8 cm *0.3 cm)
- Weight 1.25 oz.(35g)

Operating Instruction

Apresys®

1. Long hold "▶" start-up key about 5s. Then, it starts recording data after the red indicator light flashing three times and keeps lighting ten times.
2. It flashes once in each 5s during the normal working time;
3. When finishing the data, the temperature recorder can be connected with computer or printer for reading the data. In the same time, the recorder will be stopped working automatically. The indicator light will not flash and the device will never start but the data of the recorder can still be read repeatedly.

* Keep the plate recorder properly, could reprint when searching history, and could be kept permanently.

Apresys®

1. 启动记录：长按▶启动键五秒钟，红色指示灯闪烁三次后连闪十次，开始记录数据；
2. 硬件安装：第一次使用U盘记录仪，需先安装USB driver，后连接仪器按提示完成安装；
3. 软件应用：安装Apresys In-transit应用软件后通过软件读取数据；
4. 之后所有U盘记录仪可通过Apresys In-transit应用软件随时随地读取数据